

Moisture-Resistant Mini Speaker System

OWNER'S MANUAL — Please read before using this equipment.

Your Moisture Resistant Mini Speaker System provides superior stereo sound from your radio/tape player, CD player, or a personal computer. Enjoy radio programs or music almost anywhere. The unique splash-proof design lets you use the speaker system in high humidity environments.

CONNECTION

Plug the speaker system's 1/8-inch (3.5mm) plug into the audio source's headphone jack.


Notes:

- Ensure the audio source is off and its volume control is at minimum level.
- If the audio source does not have a 1/8-inch jack, you need an adapter plug, available at your local RadioShack store.
- For the best stereo effect, position the speakers apart from each other, facing the center of the listening area.

ATTACHING/DETACHING THE SPEAKERS

For convenient carrying, you can attach your speakers together.

Align the tabs on the backs of the speakers and slide them together. To detach the speakers, simply slide them apart.

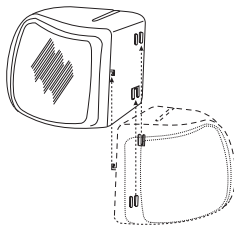

Note: When detaching the speakers, take care to avoid breaking the tabs.

CARE

Keep the speakers dry; if they get wet, wipe dry immediately. Use and store them only in normal temperature environments. Handle the speakers carefully; do not drop them. Keep them away from dust and dirt, and wipe with a damp cloth occasionally to keep them looking new.

Modifying or tampering with the speaker's internal components can cause a malfunction and might invalidate the warranty. If your speaker system is not performing as it should, take it to your local RadioShack store for assistance.

Caution: You might permanently damage your speakers by cleaning them with a vacuum cleaner. Use a feather duster or a soft loose cloth instead.

SPECIFICATIONS

Speaker	2 1/4 Inches
Impedance	4 Ohms ±25%
Dimensions (HWD)	3 3/8 × 2 5/8 × 2 1/4 Inches (8.5 × 6.7 × 5.7 cm)
Weight	10.6 oz (300 g)

Specifications are typical, individual units might vary. Specifications are subject to change and improvement without notice.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99